
## **UDD Series Capacities**





## NARROW DEPTH

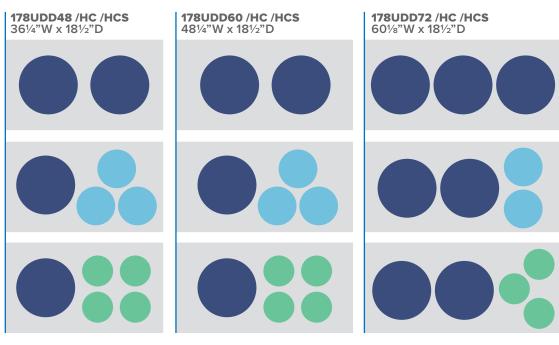

**Suggested layouts only.** Please allow space around each keg for proper air circulation. Improper air circulation leads to warmer cabinet temperatures and may have an adverse effect on beer service. Malfunction due to improper or overloading is not covered under warranty. Please allow at least 24 hours for kegs to reach dispensing temperatures.